

Item	Designation
<u>A1</u>	Instrument cluster
<u>A12</u>	Tailgate closing assist
<u>A35/17</u>	Tele Aid (emergency call system) and D2B telephone transmitter/receiver control module
<u>A37</u>	PSE control module

<u>E4</u>	Right taillamp unit
<u>E4e2</u>	Tail/parking lamp
<u>E15/3</u>	Rear dome lamp
<u>E18/1</u>	Trunk lamp

<u>E25/3</u>	Left D-pillar interior lamp
<u>E25/4</u>	Right D-pillar interior lamp
<u>E40</u>	Rear deck lid area lamp
<u>E40/1</u>	Tailgate area lamp
<u>F1</u>	Fuse and relay box
<u>F1f12</u>	Fuse 12
<u>F1f14</u>	Fuse 14
<u>F4</u>	Rear fuse box

<u>F4f3</u>	Fuse 3
<u>F4f5</u>	Fuse 5
<u>F4f11</u>	Fuse 11

<u>F4f19</u>	Maxi-Fuse 19
<u>H3</u>	Alarm horn
<u>H3/1</u>	Alarm siren with auxiliary battery
<u>M6/4</u>	Tailgate wiper motor
<u>M6/4k1</u>	Tailgate wiper motor relay module
<u>N7-1</u>	Illumination control module
<u>N10/1</u>	Signal pickup- and activation module (SAM) left front
<u>N72</u>	Lower control field control module
<u>N72s15</u>	RTR switch
<u>R1</u>	Rear window defroster element

<u>S6/1</u>	Cockpit switch group
<u>S6/1s2</u>	Interior switch (CL)
<u>S6/1s3</u>	RHR unlocking switch
<u>S15/1</u>	Trunk release switch

<u>S15/1x1</u>	Trunk release switch connector
----------------	--------------------------------

<u>S17/3</u>	Left front door switch
<u>S17/4</u>	Right front door switch
<u>S17/5</u>	Left rear door switch
<u>S17/6</u>	Right rear door switch
<u>S17/8</u>	Trunk lamp switch
<u>S62</u>	Engine hood switch (ATA)
<u>S88/10</u>	Trunk lid emergency release switch
<u>U57</u>	Valid for station wagon
<u>U58</u>	Valid for sedan and limousine
<u>U180</u>	Valid for ATA with siren
<u>W6/1</u>	Ground (left taillamp in trunk)
<u>W16/4</u>	Ground (output ground - right wheel housing)
<u>W18</u>	Ground (left front seat crossmember)
<u>W19</u>	Ground (right front seat crossmember)
<u>W29/8</u>	Ground (left D-pillar)
<u>X30/7</u>	CAN connector
<u>Z6/20</u>	Tailgate ground connector sleeve
<u>Z6/43</u>	Ground W6/1 connector sleeve
<u>Z7</u>	Circuit 30 connector sleeve
<u>Z21/3</u>	Rear door contact connector sleeve (switched ground feed from left rear (S17/5) and right rear (S17/6) door cont switches)
<u>Z21/5</u>	Trunk lid lock switch 1 connector sleeve (ATA/CL)
<u>Z21/11</u>	Trunk lid open indicator lamp connector sleeve
<u>Z40</u>	Stop lamp connector sleeve
<u>Z43</u>	Rear window defrost connector sleeve

