

Условное обозначение:

A1	Instrument cluster	42 L
A1	Instrument cluster	46 L
A12	Rear-end door closing assist	49 L
A26/1	Driver door IR receiver	2 L
A26/1	Driver door IR receiver	5 L
A26/2	Front passenger door IR receiver	16 L
A37	PSE control unit (combined)	15 L
A37	PSE control unit (combined)	36 A
A37	PSE control unit (combined)	44 A
A37	PSE control unit (combined)	52 A
A37	PSE control unit (combined)	61 A
A37	PSE control unit (combined)	67 A
E18/1	Luggage compartment lamp	51 L
E18/1	Luggage compartment lamp	55 L
E40	Trunk lid ambient lamp	56 L
F1	Fuse and relay box	9 L
F1f16	Fuse 16	9 K
F4	Rear fuse box	21 L
F4	Rear fuse box	35 L
F4	Rear fuse box	62 L
F4f1	Fuse 1	21 K
F4f11	Fuse 11	62 K
F4f19	Maxi fuse 19	35 K
F4f3	Fuse 3	36 K
F4f4	Fuse 4	21 K
F4f5	Fuse 5	34 K
N10/1	Driver-side signal acquisition and actuation module (SAM)	23 L
N10/1	Driver-side signal acquisition and actuation module (SAM)	28 L
N69/1	Driver-side front door control unit	4 A
N69/1	Driver-side front door control unit	10 A
N69/2	Passenger-side front door control unit	14 A
N69/2	Passenger-side front door control unit	19 A
N70	Overhead control panel control unit	23 A
N72	Lower control panel control unit	38 L
N72s15	Remote trunk lid release switch	37 L
N73	EIS [EZS] control unit	32 L
S15/1	Remote trunk lid release switch	67 L
S15/1	Remote trunk lid release switch	69 L
S15/1	Remote trunk lid release switch	71 L

Позиция:

Условное обозначение:

S15/1x1	Remote trunk lid release switch connector
S15/1x1	Remote trunk lid release switch connector
S15/1x1	Remote trunk lid release switch connector
S17/3	Left front door contact switch
S17/4	Right front door contact switch
S17/5	Left rear door contact switch
S17/6	Right rear door contact switch
S17/8	Luggage compartment lamp switch
S17/8	Luggage compartment lamp switch
S6/1	Cockpit switch group
S6/1s2	CL [ZV] interior switch
S86/1	Left front lock switch
S86/1s1	Left front lock switch, unlock
S86/1s2	Left front lock switch, lock
S87/1	Right front lock switch
S87/1s1	Right front lock switch, unlock
S87/1s2	Right front lock switch, lock
S88/10	Trunk lid emergency release switch
S88/2	Trunk lid lock switch
S88/2s1	Trunk lid lock switch, unlock
S88/2s2	Trunk lid lock switch, lock
S88/2x1	Trunk lid lock switch connector
U1	Valid for USA
U12	Valid for left-hand drive vehicles
U12	Valid for left-hand drive vehicles
U12	Valid for left-hand drive vehicles
U13	Valid for right-hand drive vehicles
U13	Valid for right-hand drive vehicles
U13	Valid for right-hand drive vehicles
U2	Valid for all exceptUSA
U2	Valid for all exceptUSA
U22	Valid for USA Japan
U57	Valid for station wagon
U58	Valid for sedans and LWB sedans
U58	Valid for sedans and LWB sedans
U58	Valid for sedans and LWB sedans
U58	Valid for sedans and LWB sedans
U58	Valid for sedans and LWB sedans
W1	Main ground (behind instrument cluster)

Позиция:

66 K
68 K
70 K
44 L
45 L
65 L
64 L
53 L
57 L
28 A
29 A
11 L
10 L
11 L
12 L
12 L
12 L
59 L
13 L
13 L
13 L
13 J
58 G
9 G
21 G
42 E
8 G
20 G
46 E
23 J
24 J
10 G
47 E
51 E
54 E
66 E
68 E
70 E
32 H

Условное обозначение:

W18	Ground (left front seat crossmember)
W18	Ground (left front seat crossmember)
W18	Ground (left front seat crossmember)
W18	Ground (left front seat crossmember)
W18	Ground (left front seat crossmember)
W19	Ground (right front seat crossmember)
W19	Ground (right front seat crossmember)
W19	Ground (right front seat crossmember)
W19	Ground (right front seat crossmember)
W19	Ground (right front seat crossmember)
W19	Ground (right front seat crossmember)
W6/1	Ground (left taillamp in trunk)
W6/1	Ground (left taillamp in trunk)
W6/1	Ground (left taillamp in trunk)
W6/1	Ground (left taillamp in trunk)
W6/1	Ground (left taillamp in trunk)
X30/7	Voltage distributor (CAN) connector
X30/7	Voltage distributor (CAN) connector
X30/7	Voltage distributor (CAN) connector
X30/7	Voltage distributor (CAN) connector
X35/41	Driver door separation point
X35/42	Front passenger door separation point
X4	Terminal block (circuit 30, left footwell)
X8/13	Driver door infrared receiver connector
Z21/11	Remote trunk lid opening indicator lamp connector sleeve
Z21/5	Trunk lid lock switch 1 connector sleeve (ATA/CL [EDW/ZV])
Z6/43	Ground W6/1 connector sleeve
Z6/43	Ground W6/1 connector sleeve
Z6/43	Ground W6/1 connector sleeve
Z7	Tml. 30 connector sleeve
Z7/30	Circuit 30 connector sleeve (unfused)
Z87/15	Cable end (two-way radio antenna)

Позиция:

9 H
20 H
28 E
44 H
66 H
8 H
20 H
22 E
38 E
45 H
64 H
13 H
53 H
57 F
65 H
68 H
71 E
7 L
18 L
26 A
40 L
6 E
18 E
33 A
4 H
60 H
58 H
56 H
60 H
70 H
37 H
32 E
23 E

