

Условное обозначение:

A37	PSE control module (combined)	
B38	Rain sensor	
F1	Fuse and relay box	
F1	Fuse and relay box	
F1	Fuse and relay box	
F1f15	Fuse 15	
F1f16	Fuse 16	
F1f22	Maxi-fuse 22	
F4	Fuse box in trunk	
F4	Fuse box in trunk	
F4f2	Fuse 2	
F4f4	Fuse 4	
F4f9	Fuse 9	
K40/2	Driver-side fuse and relay module	
K40/2	Driver-side fuse and relay module	
K40/2	Driver-side fuse and relay module	
K40/2f1	Fuse, wipe relay module, stage 1-2	
K40/2f2	Fuse, washer pump	
K40/2f3	Fuse, HCS [SRA] pump	
K40/2f4	Fuse, FAN	
K40/2f5	Fuse (signal-acquisition and actuation module (SAM))	
K40/2f6	Fuse (washer nozzle heater)	
K40/2k1	Wiper stage 1 relay	
K40/2k2	Wiper stage 2 relay	
K40/2k3	Windshield washer relay	
K40/2k5	HCS [SRA] pump relay	
M5/1	Windshield washer fluid pump	
M5/3	Tailgate washer fluid pump	
M6/1	Wiper motor	
M6/4	Tailgate wiper motor	
M6/4k1	Tailgate wiper motor relay	
N10/1	Driver-side signal-acquisition and actuation module (SAM)	
N10/1	Driver-side signal-acquisition and actuation module (SAM)	
N10/1	Driver-side signal-acquisition and actuation module (SAM)	
N70	Overhead control panel control module	
N73	DI control module	
N73	DI control module	
R2/2	Left heated windshield washer nozzle	
R2/2x1	Left heated windshield washer nozzle connector	

Позиция:


52 A
28 L
40 L
53 L
55 L
53 K
55 K
39 K
33 L
56 L
56 K
57 K
33 K
4 A
12 A
20 A
19 A
23 A
5 A
11 A
14 A
13 A
18 A
16 A
21 A
9 A
25 L
44 L
8 L
49 L
50 L
17 F
30 A
44 A
30 L
14 L
37 A
23 L
22 G

Условное обозначение:


R2/2x1	Left heated windshield washer nozzle connector
R2/3	Right heated windshield washer nozzle
S4	Combination switch
S4s4	Windshield washer system switch
S4s5	Wipe switch
S4x1	Combination switch connector
S6/1	Cockpit switch group
S6/1s4	Rear wiper switch
U12	Valid for left-hand steering
U13	Valid for right-hand steering
U152	Valid for model 202
U152	Valid for model 202
U153	Valid for model 208
U57	Valid for T-model
U88	Valid for version with rain sensor
W1	Main ground (behind instrument cluster)
W1	Main ground (behind instrument cluster)
W16/3	Ground (output ground – component compartment – left)
W18	Ground (left front seat crossmember)
W18	Ground (left front seat crossmember)
W19	Ground (right front seat crossmember)
W6	Ground (left wheelhousing in trunk)
W6	Ground (left wheelhousing in trunk)
W7	Ground (right wheelhousing in trunk)
X26/23	Engine compartment/cockpit connector
X30/7	Voltage distributor (CAN) connector
X30/7	Voltage distributor (CAN) connector
X4	Terminal block (circuit 30, left footwell)
X4	Terminal block (circuit 30, left footwell)
Z3/26	Circuit 15 (unfused) connector sleeve
Z3/27	Circuit 15R (unfused) connector sleeve
Z3/27	Circuit 15R (unfused) connector sleeve
Z37/2	CAN engine bus (low) connector sleeve
Z37/3	CAN engine bus (high) connector sleeve
Z6/20	Tailgate ground connector sleeve

Позиция:

23 H
22 L
38 L
38 K
37 K
37 H
42 L
43 L
34 J
35 J
1 F
5 F
4 F
41 A
27 G
11 H
37 E
25 G
35 L
43 H
34 L
45 H
48 E
52 E
34 E
26 A
46 L
12 L
39 E
7 H
13 H
40 H
32 E
33 E
48 H

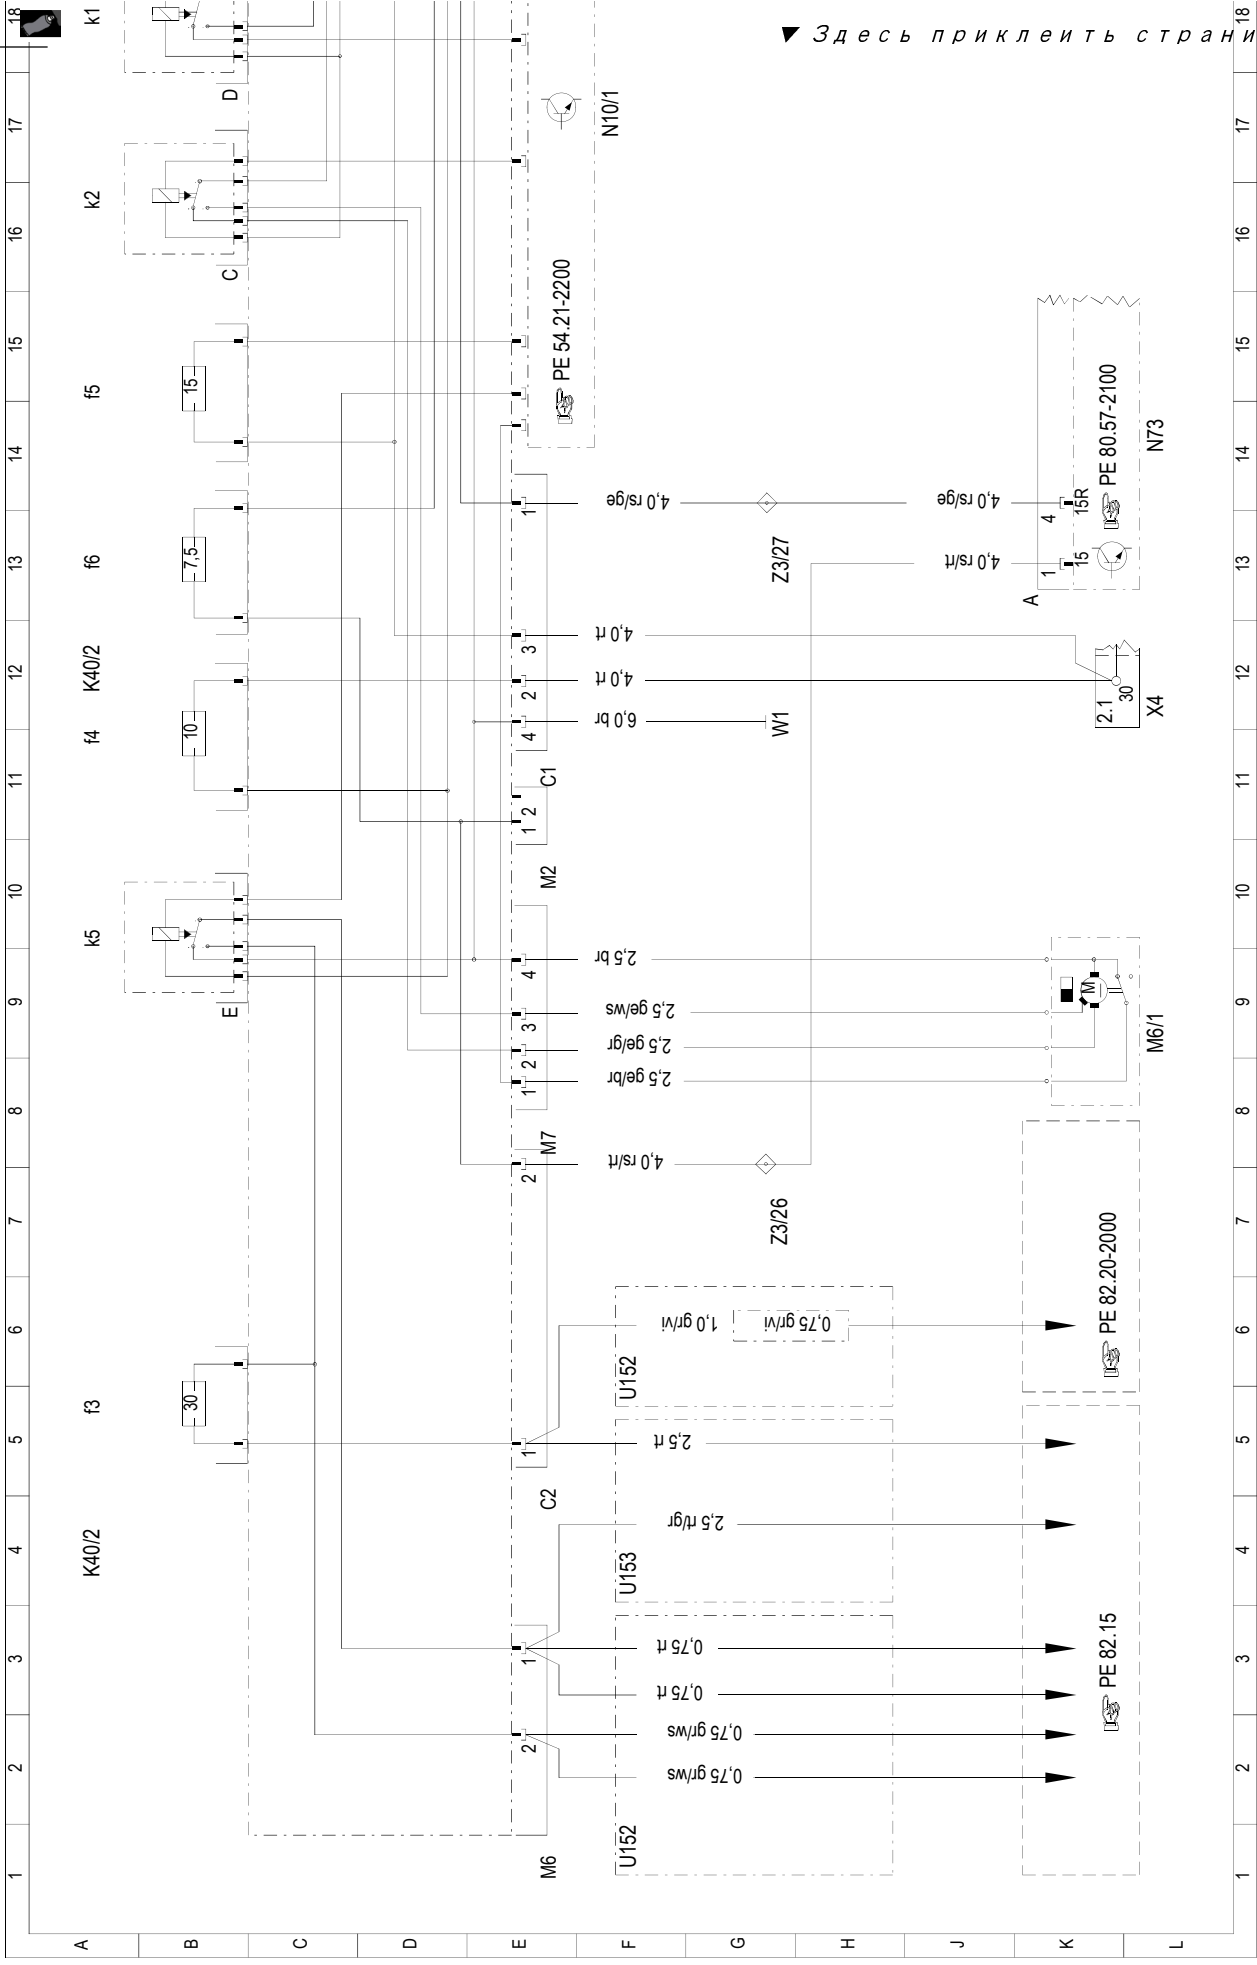

▼ Здесь приклеить страницу 2 ▼

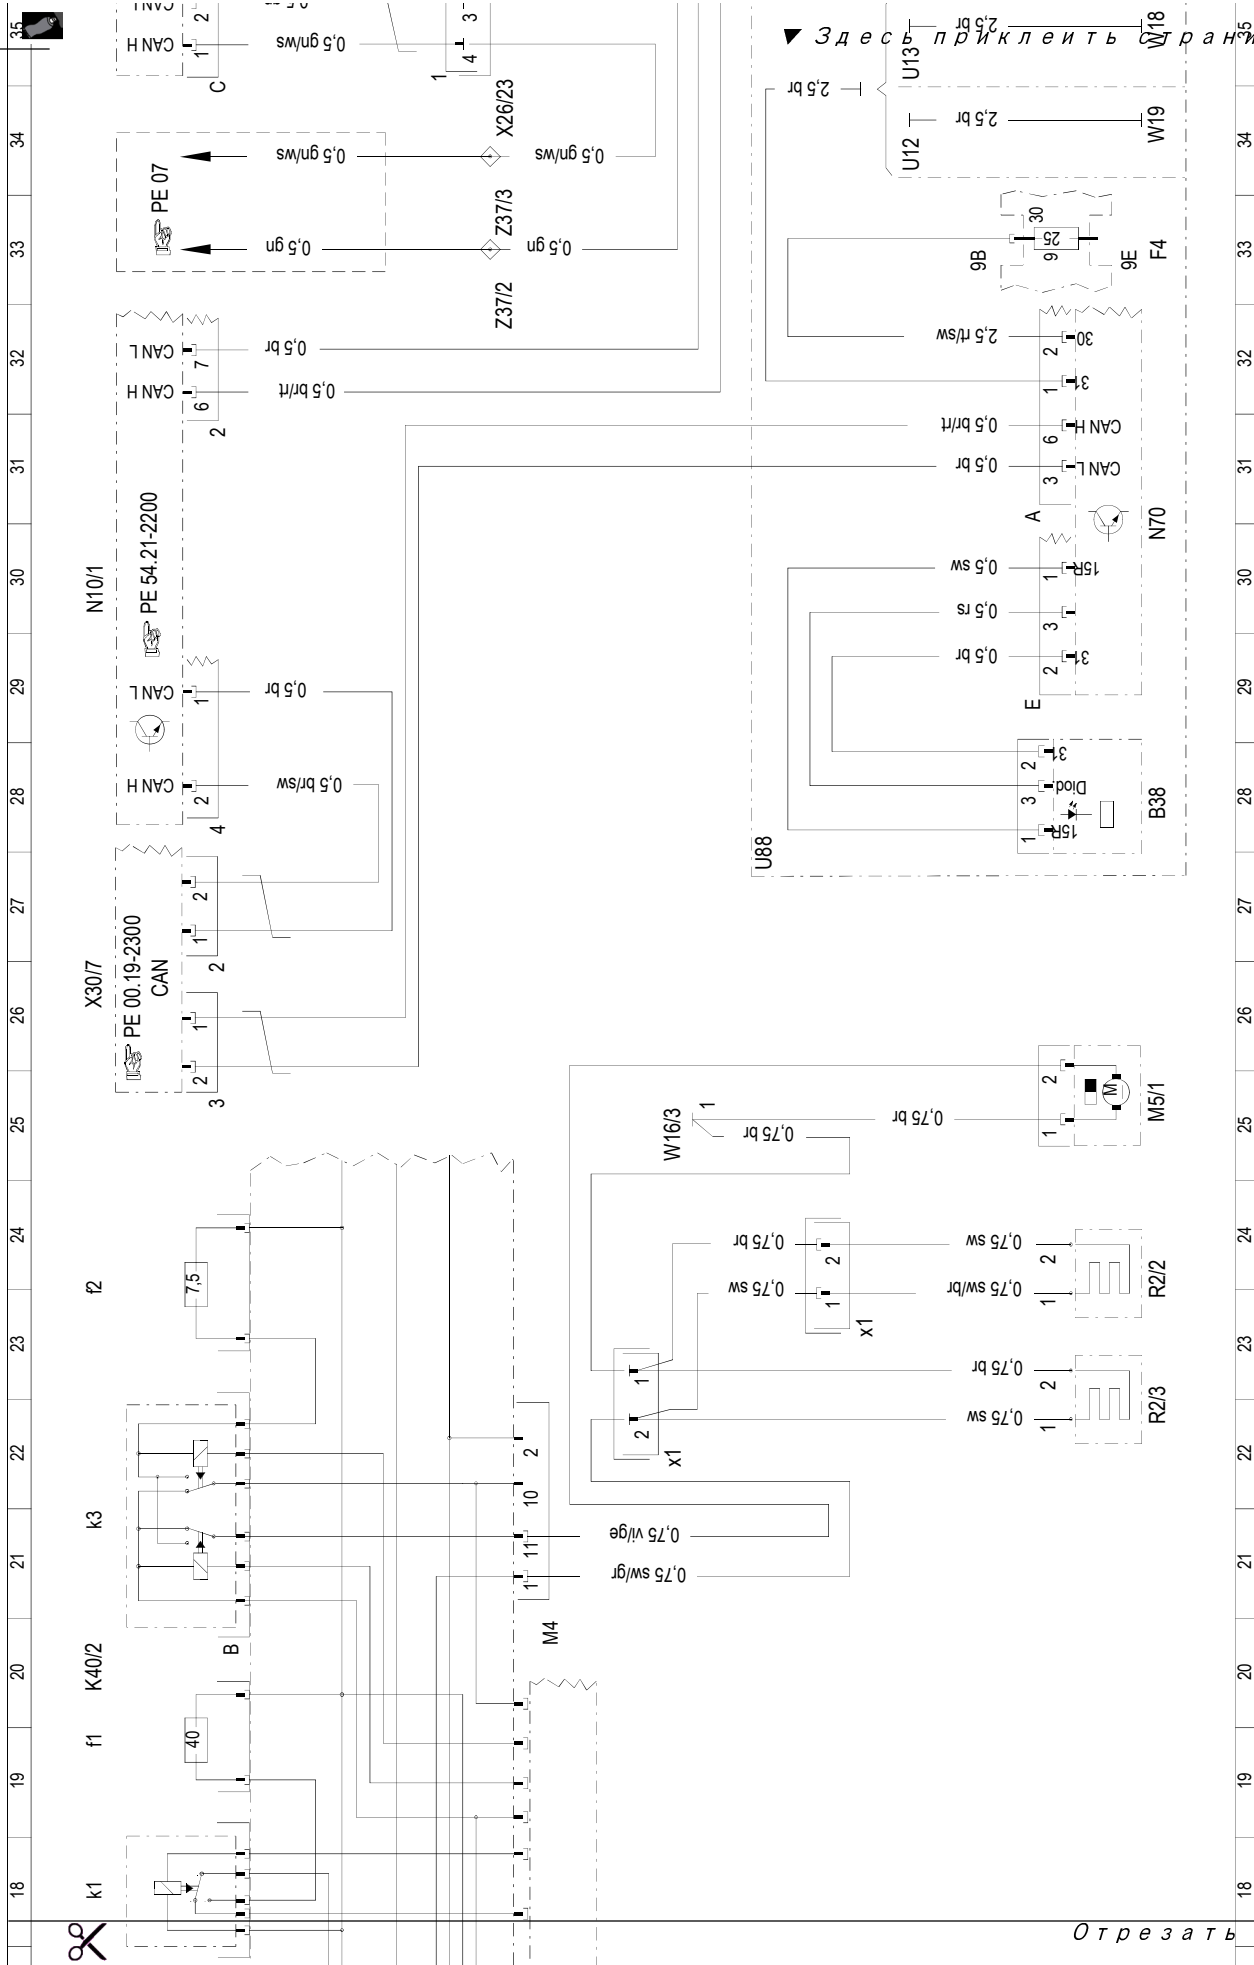

Отрезать здесь

Здесь приклеить страницу 3

