

Условное обозначение:

A1	Instrument cluster
A1	Instrument cluster
A1e17	ABS indicator lamp
A1e41	ESP warning lamp
A1e47	BAS/ESP indicator lamp
A1e6	Brake pad wear indicator lamp
A1e7	Brake fluid and parking brake warning lamp
A7/3	Traction system hydraulic unit
A7/3m1	High pressure and return pump
A7/3y10	Left rear solenoid valve (pressure hold)
A7/3y11	Left rear solenoid valve (pressure release)
A7/3y12	Right rear solenoid valve (pressure hold)
A7/3y13	Right rear solenoid valve (pressure release)
A7/3y18	Front axle switchover solenoid valve
A7/3y19	Rear axle switchover solenoid valve
A7/3y22	Front axle inlet solenoid valve
A7/3y23	Rear axle inlet solenoid valve
A7/3y6	Left front solenoid valve (pressure hold)
A7/3y7	Left front solenoid valve (pressure release)
A7/3y8	Right front solenoid valve (pressure hold)
A7/3y9	Right front solenoid valve (pressure release)
A7/7	BAS brake booster
A7/7b1	BAS diaphragm travel sensor
A7/7s1	BAS release switch
A7/7x1	Diaphragm travel sensor connector
A7/7x2	Release switch and solenoid valve connector
A7/7y1	BAS solenoid valve
B24/2	ESP lateral acceleration sensor
B34	ESP brake pressure sensor
CAN H	
CAN L	
F4	
F4f11	Rear fuse box
G1	Fuse 11
K40/2	Battery
K40/2k4	Driver-side fuse and relay module
K40/4	High pressure/return pump relay
K40/4f2	Passenger-side fuse and relay module
K40/4k1	Fuse 2, diesel engine control unit power supply
	Reverse polarity protection relay

Позиция:

61 L
67 A
68 A
69 A
68 A
66 A
67 A
4 L
6 L
3 J
4 J
3 J
4 J
3 G
4 H
4 G
3 H
3 K
4 K
3 K
4 K
17 L
16 L
17 L
15 J
17 J
18 L
27 L
13 L
66 B
65 B
53 L
53 K
30 L
8 L
9 L
37 L
40 L
36 L

Условное обозначение:

K55	Stop lamp suppression relay
L6/1	Left front rpm sensor
L6/2	Right front rpm sensor
L6/3	Left rear rpm sensor
L6/4	right rear rpm sensor
LS1	
LS2	
N47-5	ESP, SPS [PML] and BAS control unit
N47-5	ESP, SPS [PML] and BAS control unit
N47-5	ESP, SPS [PML] and BAS control unit
N47-5	ESP, SPS [PML] and BAS control unit
N47-5	ESP, SPS [PML] and BAS control unit
N47-5	ESP, SPS [PML] and BAS control unit
N47-5	ESP, SPS [PML] and BAS control unit
N47-5	ESP, SPS [PML] and BAS control unit
N49	Steering angle sensor
N64	ESP yaw rate sensor
N7-1	Light module
N73	EIS [EZS] control unit
S10/1	Left front brake pad contact sensor
S10/2	Right front brake pad contact sensor
S10/4	Right rear brake pad contact sensor
S12	Parking brake indicator switch
S76/6	ESP OFF switch
S9/1	Stop lamp switch
U12	Valid for left-hand drive vehicles
U12	Valid for left-hand drive vehicles
U12	Valid for left-hand drive vehicles
U12	Valid for left-hand drive vehicles
U13	Valid for right-hand drive vehicles
U13	Valid for right-hand drive vehicles
U13	Valid for right-hand drive vehicles
U13	Valid for right-hand drive vehicles
U77	Valid for speed-sensitive power steering (SPS [PML])
W1	Main ground (behind instrument cluster)
W16/3	Power ground (left wheelhouse)
W16/3	Power ground (left wheelhouse)
W16/4	Power ground (right wheelhouse)
W16/4	Power ground (right wheelhouse)

Позиция:

47 L
20 L
22 L
26 L
24 L
17 B
18 B
3 A
11 A
19 A
28 A
36 A
44 A
53 A
60 A
55 L
29 L
45 L
32 L
20 L
22 L
24 L
62 L
58 L
43 L
10 D
44 J
57 G
57 J
11 D
44 J
57 G
58 J
14 A
31 H
6 E
10 E
11 E
34 E

Условное обозначение:

W18	Ground (left front seat crossmember)
W18	Ground (left front seat crossmember)
W18	Ground (left front seat crossmember)
W19	Ground (right front seat crossmember)
W19	Ground (right front seat crossmember)
X11/4	Data link connector
X12/3	Terminal block (circuit 30)
X4	Terminal block (circuit 30, left footwell)
X4	Terminal block (circuit 30, left footwell)
X4/28	Steering angle sensor connector
X62/1	Left rear rpm sensor/brake wear indicator connector
X62/2	Right rear rpm sensor/brake wear indicator connector
X62/6	Right front axle multiple circuit junction connector, major assembly compartment
X62/7	Left front axle multiple circuit junction connector, major assembly compartment
X63/6	CAN databus/15u connector
X63/6	CAN databus/15u connector
Y10	SPS [PML] solenoid valve
Z3/38	Circuit 15R (unfused) connector sleeve
Z37/13	CAN engine bus (low) connector sleeve
Z37/14	CAN engine bus (high) connector sleeve
Z37/2	CAN engine bus (low) connector sleeve
Z37/3	CAN engine bus (high) connector sleeve
Z40	Stop lamp signal connector sleeve
Z7/30	Circuit 30 connector sleeve (unfused)
Z7/30	Circuit 30 connector sleeve (unfused)
Z81/4	FFS [RBA] circuit 58d connector sleeve
Z88	Left front VSS [GES] (feed from traction system control units)
Z89	Right front axle VSS [GES] sensor connector sleeve (feed from ABS - N30 or ASR - N30/1, N47-1, ETS-N47-2 control unit)
Z90	Left rear axle VSS [GES] connector sleeve
Z99/3	Circuit 87 connector sleeve (FFS [RBA])
Z99/3	Circuit 87 connector sleeve (FFS [RBA])
Z99/4	Steering angle sensor connector sleeve

Позиция:

57 E
58 H
62 H
56 E
57 H
37 E
12 E
11 L
33 E
54 H
25 H
23 H
21 H
19 H
35 E
64 G
15 L
32 E
64 E
65 E
64 H
65 H
44 H
10 H
33 H
58 H
48 E
49 E
51 E
41 H
54 E
55 E







